

LG Washer Error Codes: Printable Cheat Sheet

Code	What it means	First thing to try	Guide
OE	Water cannot drain	Straighten/clear the drain hose; clean the drain pump filter	Full guide
IE	Water supply inadequate	Open the water tap fully; straighten hoses; clean the inlet filters	Full guide
UE / uE	Unbalanced load (small uE = washer is rebalancing itself)	Rearrange items, close the door, press Start/Pause	Full guide
dE	Lid/door not closed properly	Close the lid fully, then press Start/Pause	–
LE	Motor overloaded and locked	Let the washer rest 30 minutes, then restart the cycle	–
FF	Washer is frozen	Add warm water to the drum; wrap the supply hose in a warm, wet towel	–
PF	Power failure during a cycle	Restart the cycle	–
tE	Heating / thermistor error	Unplug 10 seconds, plug back in and restart; request repair if it persists	–
PE	Water level sensor problem	Unplug 10 seconds and restart; request repair if it persists	–

Codes vary by model (front load, top load). Your owner's manual is the authority. Unplug power before any hands-on check. Not affiliated with the manufacturer. **Sources (checked Oct 21, 2026):** LG US: LG Washer – Error Code List ; LG: Washing Machine – Error Codes (tE, PE) . fixcode-guide.netlify.app